

THANE HOUSEWARES™

*Flavor Wave*  
*Deluxe* **OVEN**®

# Owner's Manual

## Care & Use Guide

THANE HOUSEWARES™

*Flavor Wave*  
*Deluxe* **OVEN**®

FOR HOUSEHOLD USE ONLY

[www.thane.com](http://www.thane.com)

Distributed by: Thane International, Inc. • La Quinta, CA 92253 USA

1-800-762-4427





## Thank You...

On behalf of the entire team at Thane Housewares, we appreciate your recent purchase of your Flavorwave Deluxe.

This cooking system will provide you with healthy and tasty meals for many years to come. We worked long and hard to make this the best cooking appliance available and, only after extensive testing, added it to our family of quality products for the home.

Enjoy your new Flavorwave Deluxe.

... and, once again, thank you.

# IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

### DANGER – To reduce the risk of electrocution:

1. Read all instructions, safeguards, and warnings before using the appliance.
2. Do not place appliance where it can fall or be pulled into water or other liquid.
3. Do not reach for an appliance that has fallen into water. Unplug immediately!
4. Do not immerse cord, plug, or heater/control assembly of the appliance in water or other liquids.

### WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons.

1. This appliance should not be used by children. Close supervision is necessary when this product is used near children or invalids.
2. Use this appliance for its intended use as described in this brochure. Do not use any other accessories or attachments not recommended by the manufacturer. They may result in fire, electrical shock, or personal injury.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized customer service center for inspection, repair, or adjustment.
4. Keep the cord away from heated surfaces.
5. Always grab by the plug to remove from outlet. DO NOT pull on cord.
6. Never force the plug into an outlet.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner or in a heated oven.
10. Do not move the appliance while it contains hot food. Use extreme caution when removing hot liner pan or cooking racks.
11. Before removing plug from wall, turn UNIT OFF by pressing the ON/OFF button.
12. Do not use this appliance for anything other than it is intended.
13. Check all electrical wiring. Beware of damaged cord or plug.
14. This appliance is for household use only; it is designed to process normal household quantities. It is not suitable for continuous or commercial operation.
15. Do not disassemble the product. There are no user serviceable parts.
16. Do not leave the appliance unattended while in use.

17. Use the handles when lifting the dome from the base.
18. Do not touch hot surfaces, such as the hood, or the heater/control assembly. Use the handles provided.
19. Place the unit on PAUSE/CLEAR before removing the dome to check or turn food. The dome and heater/control assembly should be placed on the counter resting on their side.
20. Always remove the dome away from you so the escaping steam is channeled away from your face.
21. If the power cord is damaged, it should be replaced by a special cord or assembly from the manufacturer or its service agent.
22. Use caution when disposing of hot grease.
23. Unplug from outlet when not in use and before cleaning.
24. Keep this manual handy for easy future reference.

## SAVE THESE INSTRUCTIONS


### Electrical Information

The cord length of this appliance was selected to reduce Safety Hazards that may occur with a long cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the counter or table top where it could be pulled on by children or tripped over.

Certain models of the appliances may have a polarized plug (one blade is wider than the other). To reduce the risk of an electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit properly, contact a qualified electrician. Do not attempt to modify the plug in any way.

	 <b>WARNING</b>
	<p>Electric shock hazard. Use with adequate electrical system. Do not use if cord or plug is damaged.</p> <p><b>WARNING:</b> All metal items in the oven, such as the cooking grill can get very hot during cooking. Please be careful when removing these items from a hot oven. Always wear oven mitts or use pot holders. Allow liner pan and cooking grill to cool completely before cleaning. The dome opening may expand slightly when hot. In rare instances, the heater control assembly could detach itself from the dome completely, thereby causing hot air to escape from between the dome and the heater control assembly.</p>

# PARTS/ASSEMBLY DIAGRAM

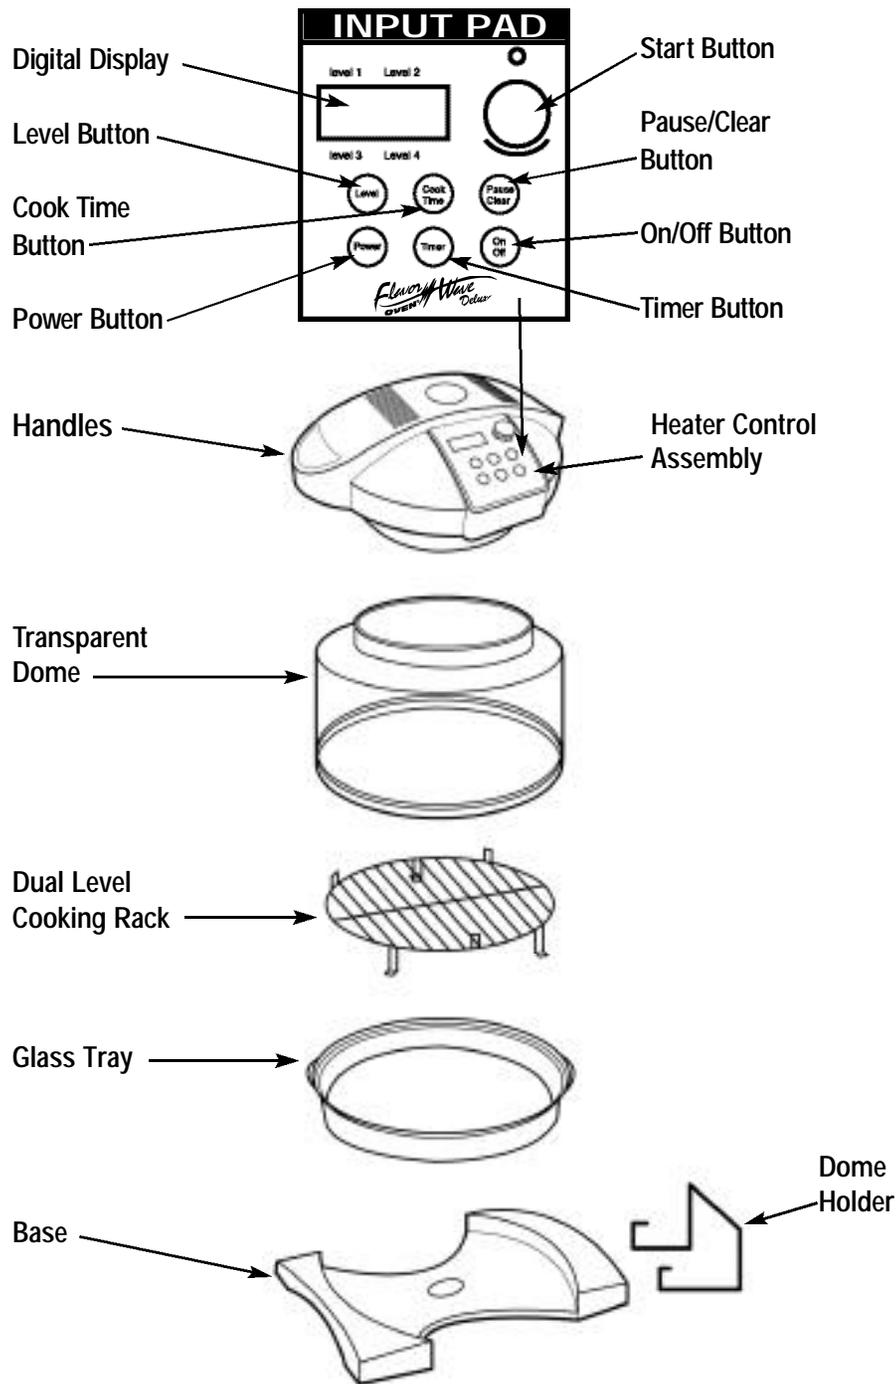

## Before Using

- Before using, wash transparent dome, glass tray, base, and cooking grill in hot soapy water or clean in your dishwasher.




- **IMPORTANT: DO NOT WASH OR IMMERSE HEATER/CONTROL ASSEMBLY IN WATER OR IN DISHWASHER. THE OUTER SURFACE CAN BE CLEANED BY WIPING CAREFULLY WITH A DAMP DISHCLOTH OR SPONGE.**

- Remove the thin vinyl film on the control panel before operating. After the vinyl film is removed you may notice an appearance of unknown images on the display panel. Please do not be alarmed. This is caused by static electricity from the vinyl film and will disappear after 15-20 seconds.

- Temperature is controlled by a micro chip. Therefore, when the temperature hits 400°F, the heater pauses which may cause the light to go out.

## Assembly

- Place base on a firm stable surface.
- Place glass tray inside base.
- Place dual level cooking rack on the liner pan according to cooking requirements.
- Place food on the cooking rack.
- Place transparent dome over food and onto base. The dome should fit into the base evenly.
- Place heater/control assembly into dome and lock it into place by rotating the heater/control assembly clockwise until the locking lugs are engaged.
- Set time and power according to cooking requirements.

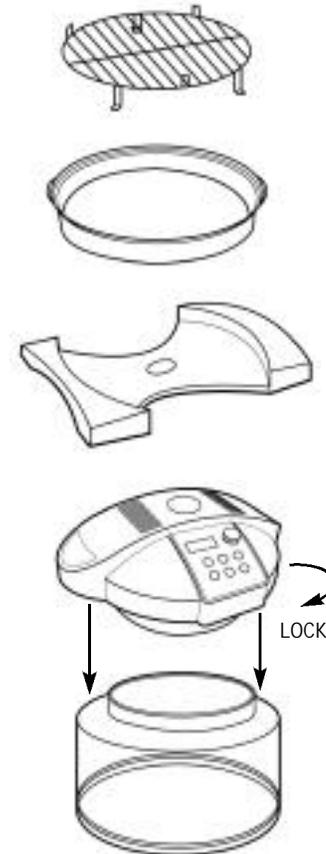

## General Use Instructions

- Make sure the unit is safely plugged into a properly grounded outlet and that the cord is not touching any hot object.
- Make sure that the glass tray has been placed within the base.
- Do not place the glass tray directly onto a stove burner or direct heat source. It will crack or break.
- Metal and glass dishes, pans, and foil may be safely used within the Flavor Wave Oven.

## How to Open Heat Control Assembly and Dome Assembly

Make sure the Heat Control assembly is tightly locked into the dome, then the Heat Control Assembly and Dome Assembly can be easily opened and put aside as shown in steps 1, 2 and 3: Place dome holder under either side of base handle. Make sure both feet of the dome holder are placed inside the handle and the dome holder is resting horizontally on a flat surface. Then the power head and dome assembly can be placed on the dome holder as shown in step 3.



Step 1



Step 2



Step 3


## Cooking Instructions

Lift dome only by the handles on the Heat Control assembly. Once the Heat Control assembly and the transparent dome are locked in place, the Heat Control assembly handles will allow you to lift them all together when removing and/or checking on food. When removing the glass tray while it is still hot, be extremely careful and always use oven mitts. For best results, follow the time, power, and cooking rack height instructions given in the cooking chart and the recipe book. No preheating required.

	<b>! WARNING</b>
	<p>Do not touch the transparent dome or any surfaces on the Heat Control assembly during operation. The air inside the cooking dome reaches a temperature of 338°F/170°C which makes the surface very hot and may cause burns.</p>

## Setting On/Off


- After plugging in the Flavorwave start the unit by pushing the “ON/OFF” button.
- The default “0” setting is indicated in the display panel.
- Flavorwave does not emit any heat at this setting.

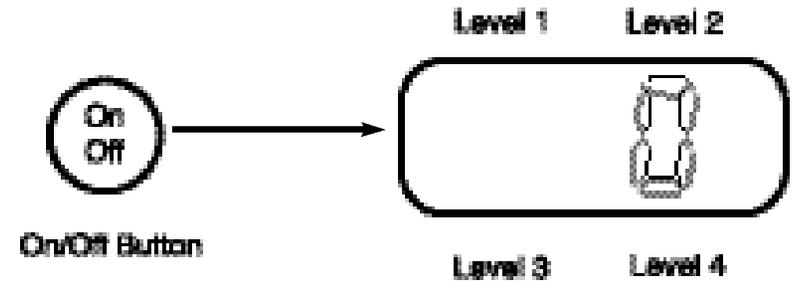

## Using Express Function - Setting “Level”

This setting provides the highest cooking temperature of 400°F. The cooking times are 1 hour for Level 1, 45 minutes for Level 2, 30 minutes for Level 3, and 15 minutes for Level 4.


- Press the “LEVEL” button.
- The default “\_” setting is indicated in the display panel.
- By pushing the “LEVEL” button the power level changes from Level 1-> Level 2-> Level 3 -> Level 4 ->.
- Verify the correct “LEVEL” setting in the control panel.
- Push the “START” button.
- If the “LEVEL” setting needs to be corrected, reenter the required Level. If the “LEVEL” setting needs to be changed after the Flavorwave starts, push the “PAUSE/CLEAR” button and reenter required “LEVEL”.
- When cooking is done, the Flavorwave Oven™ Deluxe will “beep.”

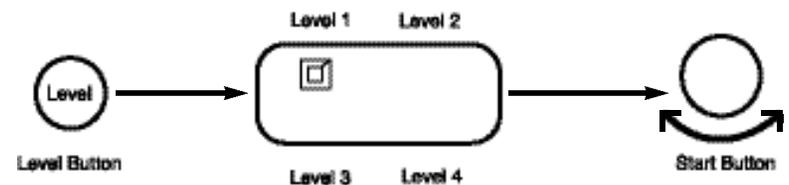

If you wish to set a specific temperature and time for cooking please read the following instructions.


## Setting Cooking Time

- Press the COOK TIME button.
- The default “0:00” setting is indicated in the display panel. The minute “00” will be flashing.
- Set the minutes by moving the “START” Button to the right or left.
- Push the “COOK TIME” button to set the hours. The hour 0 will begin to flash.
- Set the hour by moving the “START” Button to the right or left.
- Push the “COOK TIME” button one more time to set the cooking time.
- After finishing the set up, push the “START” button.
- Unless a user sets desired cooking temperature, food is automatically cooked at the highest temperature of 400°F.

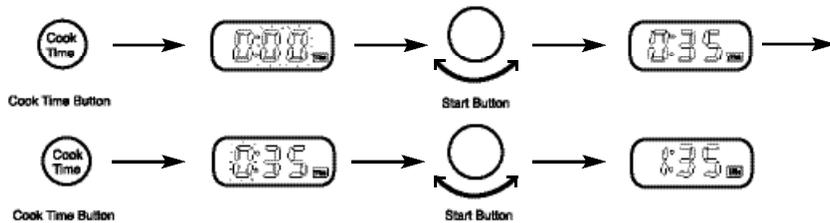


## Setting the Cooking Temperature

- After setting up the cooking time, push the “POWER” button.
- The default “400°F” will blink on the display.
- Turn the “START” knob left or right to select the temperature.
- The lowest temperature is 190°F and the highest temperature is 400°F. Temperature will skip 15° by turning “START” button.

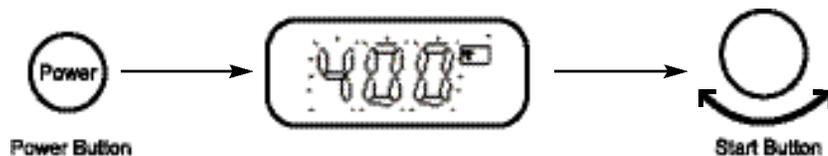

## Setting Timer for Delayed Cooking

- After setting the Cook Time and Temperature, push the “TIMER” button.
- The default “10:00” minute 00 will start blinking on the display.
- Turn the “START” button left or right to set the minutes.
- Push the “TIMER” button again and the hour 0 will begin to flash.
- Turn the “START” button left or right to set the hour.
- Push the “TIMER” button to set the timer.
- Delay time is limited to up to 10 hours.
- When the timer shows zero, the cooking is finished.
- When you use “Setting Timer” for the “Express Function” setting, the process is the same as above.

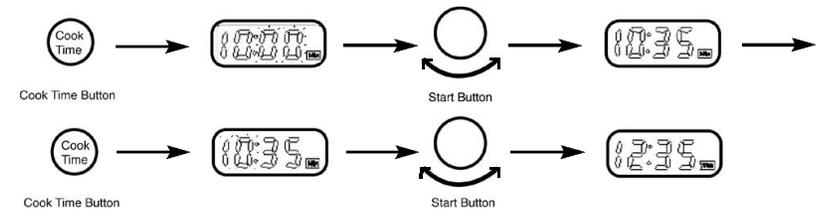

<b>WARNING</b>	
	<p>Even though your Flavorwave Oven® Deluxe comes with a Delayed Cooking feature we do not recommend you delay the cooking time for more than 1 hour for any food with the exception of raw vegetables. Most foods, especially raw poultry, meat, and fish cannot safely be left at room temperature and cooking of these foods should never be delayed for more than 1 hour. For further information on “safe food handling” please refer to the United States Department of Agriculture website at <a href="http://www.foodsafety.gov">http://www.foodsafety.gov</a> and click on the “Consumer Advice” button.</p>

	<b>WARNING</b> Do not place the power head on or close to any flammables or combustibles. It may cause fire or explosion.
--	--

	<b>WARNING</b> Do not press the START button after you lift the power head unless your oven is completely assembled as shown in the manual.
---	--

### To Start Cooking

Press "START" to begin. The remaining cooking time will appear and blink in the display window. When the cooking time has expired, the temperature automatically comes down to 190°F to keep the food warm for 3 hours, until you push "PAUSE/CLEAR" button or "ON/OFF" button. Cover the food with aluminum foil to keep it from drying out.

### To Pause Cooking

Press "PAUSE/CLEAR" once to pause cooking. The remaining cooking time will be visible in the display window and the colon will not blink.

## CLEANING AND CARE INSTRUCTIONS

### General Instructions

1. Unplug the unit before cleaning.
2. It is best to let the unit cool before cleaning.
3. Transparent dome and all other parts, EXCEPT the heater/control assembly are dishwasher safe. Protect the metal and plastic surfaces; do not use abrasive cleaners or scouring pads.
4. The outer surface of the heater/control assembly can be cleaned by wiping it with a damp cloth.



**CAUTION:** Do not attempt to wash the glass tray until it cools to room temperature. If you pour cold water on the glass tray while it is still hot, it could cause the glass to crack and/or break.

## IMPORTANT TIPS:

1. Check the power source for proper operation. Do not operate the unit with other major appliances in the same power outlet. Check power level if the unit cooks too slowly.
2. Check to see if electrical plug is properly plugged into the outlet.
3. Always clear the display panel and unplug the unit before washing.
4. Moisture may build up inside the Transparent Dome when cooked food is not removed soon after cook time has expired. The steam/moisture build-up can be avoided by removing food soon after it is done cooking.
5. When cooking is done, the Flavorwave Oven™ Deluxe will "beep."

