

THANE ~~HOUSEWARES~~

 


TURBO

USER'S GUIDE



THANE ~~HOUSEWARES~~



Thane International, Inc.,
La Quinta, CA 92253
www.thane.com

Thane Direct Canada, Inc.,
Toronto, ON
www.thane.ca

Thane Direct UK Ltd.,
Admail ADM3996, London,
W1T 1ZU
www.thanedirect.co.uk

MADE IN USA, THANE HOUSEWARES is a registered trademark of Thane International, Inc.
Copyright, ©2007 by THANE INTERNATIONAL, INC

FWOT-ENG-CAN-WARR 24/06/08





TURBO

NOTE:

THANE HOUSEWARES™



TURBO

USER'S GUIDE



Thank You...

On behalf of the entire team at Thane Housewares, we appreciate your recent purchase of the FLAVORWAVE OVEN® TURBO.

This cooking system will provide you with healthy and tasty meals for many years to come. We worked long and hard to make this the best cooking appliance available and, only after extensive testing, added it to our family of quality products for the home.

Enjoy your FLAVORWAVE OVEN® TURBO.

... and, once again, thank you.

ONE YEAR LIMITED WARRANTY

Thank you for your purchase of the amazing Flavorwave Turbo. With this warranty, the Flavorwave Turbo is warranted, to the original owner, for one (1) year from the date of purchase against defects in material and workmanship under normal use and service. Should your Flavorwave Turbo prove defective within one (1) year from date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to Flavorwave Turbo.

Please package your Flavorwave Turbo carefully to avoid damage in transit. Under this warranty, Thane Direct, will repair or replace any parts found to be defective. This warranty is effective only if the product is purchased and operated in Canada. This warranty extends only to personal use and does not extend to any product that has been used for which it is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. After the expiration of the warranty, the cost of the labor and parts will be the responsibility of the original purchaser.

Thane Direct, is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation, other consequential damages of whatsoever nature, failure to follow instructions or warnings in owner's manual or use of products in a manner for which they were not designed. Some Provinces do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which vary from Province to Province.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING:

1. Damage due to accident, misuse, abuse, commercial use or vandalism.
2. Improper or inadequate maintenance.
3. Unauthorized modification or commercial use.
4. Damage in return transit.
5. "Normal" wear of parts (wear and tear that occurs over time and with use).
6. Repairs made by an unauthorized service technician.

TO OBTAIN SERVICES - The original purchaser shall contact our customer service representative via e-mail at cs@thane.ca or by phone at **1-866-338-4263** and depending on the extent of the service required, the purchaser shall have the obligations and responsibility to:

- Pay for all services and parts not covered by the limited warranty.
- Include a cheque in the amount of \$14.95* to cover the shipping and handling, payable to "Flavorwave Turbo".
- Carefully package the product using adequate padding material to prevent damage during transit. The original packaging is ideal for this purpose.
- Include in the package: the owner's name, address, telephone #, and a detailed description of the problem.
- Provide the proof of purchase, which includes date of purchase.
- Send via Insured* Parcel Post or courier to:

Flavorwave Turbo
C/O Northland Fulfillment Inc.
101 Canarctic Drive
North York (Ontario) M3J 3N1
CANADA

FOR ALL INQUIRES, PLEASE CONTACT OUR CUSTOMER SERVICE VIA E-MAIL AT CS@THANE.CA OR BY PHONE AT 1-866-338-4263 ANY TIME M-F FROM 9:30-5:30 EST.

*** Thane Direct Canada, Inc. is NOT responsible for any non-insured items lost in transit.**



TURBO



TURBO

TROUBLE SHOOTING GUIDE

<p><i>OVEN WILL NOT TURN ON</i></p>	<ul style="list-style-type: none"> • Check to see that the power cord is plugged into AC outlet. • Check to see that the AC outlet is operational. • Turn the timer knob clockwise to 60 min and then turn back to the desired time. • Check that the thermostat is set to desired temperature. • Push the carry handle all the way down. <p>NOTE: This handle acts as a safety switch and will not allow the oven to work when in the up-right position.</p>
<p><i>OVEN WILL NOT HEAT UP</i></p>	<ul style="list-style-type: none"> • Check the thermostat to see that it is set for a high enough temperature.
<p><i>LID OR GLASS BOWL IS CRACKED</i></p>	<ul style="list-style-type: none"> • Order replacement part from the service department.

TECHNICAL SPECIFICATIONS	
Weight :	21 lbs.(9.5 kg)
Bowl Diameter :	12 in.(305 mm)
Bowl Capacity :	12 qrts.(11.0 liters)
Bowl Depth :	6.6 in. (167 mm)
Cook Temp. Range :	150°F- 500°F(65°C-260°C)
Voltage/Cycles :	110V/120V - 60Hz 220V/240V - 60Hz
Wattage :	1300W

TABLE OF CONTENTS

I.	Introduction	5
	Safety Precautions	4 - 5
II.	Using Your Oven	6
	Product and Accessory Diagrams (AX-767MH)	6 - 7
	Part Assembly Diagram	7
	Before You Begin Cooking	8
	How to Operate the FLAVORWAVE Turbo (AX-767MH)	9
	Cleaning Your Oven	10
	Product Diagrams FLAVORWAVE Turbo Platinum (AX-797DH)	11
	How to Operate the FLAVORWAVE Turbo Platinum (AX-797DH)	12 - 13
III.	Helpful Hints	14
	A Healthier Lifestyle	14
	Cooking Tips	14 - 15
	Selecting Your Food	16
	Food Preparation and Presentation	16
V.	Quick Reference Guide	17
	Trouble Shooting Guide	18



SAFETY PRECAUTIONS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:
Read all instructions, safeguards, and warnings before using the appliance.

⚠ To reduce the risk of burns, electrocution, fire, or injury to persons.

- Do not place appliance where it can fall or be pulled into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately!
- Always pull handle up to "off" position before plugging or unplugging oven.
- Place oven securely in center of counter or work space.
- Always unplug oven before attempting to move it.
- Secure the FLAVORWAVE OVEN® TURBO lid on the oven before turning on power.
- Always turn oven off before removing lid and always place lid on the lid rack. Never set it down directly on the counter. Always leave at least 2 inches between the oven lid and counter top or other surfaces.
- Use two hands when moving the oven.
- Do not allow the lid to get wet.
- The oven can not be placed near the wall (while using)
- Do not touch the glass bowl and lid or any surfaces on the heater assembly during operation. The air inside the cooking dome reaches a temperature of approximately 260°C/500°F which makes the surface very hot and may cause burns.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance for its intended use as described in this brochure. Do not use any other accessories or attachments not recommended by the manufacturer. They may result in fire, electrical shock, or personal injury.
- Never operate this appliance if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized customer service center for inspection, repair, or adjustment.
- For FLAVORWAVE Oven Turbo model **AX767MH**: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - For FLAVORWAVE Oven Turbo Platinum model **AX797DH**: If the supply cord is damaged, please order cord replacement from customer service where you purchased the product.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not move the appliance while it contains hot food. Use extreme caution when removing hot lid, glass bowl and cooking racks.

QUICK REFERENCE GUIDE

- Listed cooking time is for reference only • food should be flipped during the cooking cycle.
- Cooking time may vary depending on food type, weight, volume and texture

ITEMS	COOKING TIME		FOOD INTERNAL TEMP.		OVEN TEMP.		SETTING	COOKING & SERVING TIPS
	Fresh Food	Frozen Food	°C	°F	°C	°F		
MEATS AND FISH								
Beef Rib Roast	28 minutes per pound (medium-rare)	38	63°C (145°F)	205°C (400°F)	Grill on lower rack, top with tomato paste			
Meat Loaf (2 pound)	31 minutes per pound (medium)	41	71°C (160°F)	205°C (400°F)	Grill on lower rack, top with tomato paste			
Hamburgers - 4 Burgers (1/4 pound each)	50 to 60 minutes	60-70	73°C (163°F)	175°C (350°F)				
Hot Dogs (1 1/2 to 2 ounces each)	18 minutes (rare)	20	65°C (149°F)	205°C (400°F)	Grill on upper rack			
Rib Eye or Strip Steak (1 inch thick)	18 minutes (medium)	22	70°C (158°F)	205°C (400°F)	Upper rack			
Snapper (Whole)	20 minutes (well done)	13	75°C (167°F)	205°C (400°F)	Upper rack			
Salmon Steak	10 minutes	30	65°C (149°F)	205°C (400°F)	Peel and place 6 to 8 shrimp on each skewer			
Grilled Shrimp	26 minutes (10 min per side) - (rare)	35	70°C (158°F)	205°C (400°F)	Split and discard undershell. Upper rack			
Lobster Tails	31 minutes (12 min per side) - (medium)	40	65°C (149°F)	205°C (400°F)	Bottom rack			
Pork Loin Roast	12 to 14 minutes	15-17	65°C (149°F)	205°C (400°F)	Upper rack			
Pork Chops (1/2 inch thick)	18 minutes	21	65°C (149°F)	205°C (400°F)	Cook at 240°C for first 20 minutes			
Sausage Patties (1 pound)	29 minutes per pound	34	73°C (163°F)	185°C (360°F)				
Leg of Lamb	10 to 16 minutes	15-18	73°C (163°F)	240°C (460°F)				
Lamb Chops	Rare-26 minutes per pound	29	65°C (149°F)	200°C (390°F)				
Breaded Fish (Frozen)	Medium-31 minutes per pound	34	70°C (158°F)	200°C (390°F)				
Bacon (1 pound)	Well-56 minutes per pound	39	75°C (167°F)	200°C (390°F)				
Chicken (3 1/2 pound)	21 minutes (medium)	25	71°C (160°F)	205°C (400°F)				
Quarter	11 to 13 minutes less than package directs	11-13	65°C (149°F)	175°C (350°F)				
Half	12-16 minutes	15-18						
Whole	31 minutes	35	82°C (180°F)	240°C (460°F)	Lower rack. Brush with sauce, if desired, in last 10 minutes			
Chicken Breasts	41 minutes	45	82°C (180°F)	240°C (460°F)	Lower rack			
Turkey (Un-stuffed)	21 minutes per pound	25	82°C (180°F)	240°C (460°F)	Lower rack			
Turkey Breast (Half-3 pounds)	26 to 31 minutes per pound	31-35	82°C (180°F)	240°C (460°F)	Season before Roasting			
Cornish Hens	45 to 60 minutes	31-35	82°C (180°F)	240°C (460°F)	Season before Roasting			
Vegetables	26 minutes per pound	60-70	82°C (180°F)	240°C (460°F)				
Baked Potato (6 to 8 ounces)	41 minutes	30	85°C (185°F)	205°C (400°F)	Lower rack. Spray rack with non-stick coating			
Corn on the Cob (4 ears) Unshucked	26 minutes	30	60°C (140°F)	205°C (400°F)	Lower rack. Unshucked and soak in water			
French Fries	16 minutes or until crisp (spray lightly with oil to make fries browner)	18-20	85°C (185°F)	230°C (450°F)	Lower rack. Spray rack with non-stick coating			



SELECTING YOUR FOOD

MEAT

Beef : Select rich, red, fine-textured meat with a light covering of fat (having a marbled appearance). Buy whole pieces and cut to suit – you can really save a lot.
Lamb: Select lean meat. Meat should be soft, pinkish-red and fine textured.
Pork : Select lean meat. Meat should be very light pink in color, fine textured and fresh smelling.

FISH

Whole: Select only fresh fish with full, clear eyes and bright gills - a sure sign of freshness. Also, scales should be bright and clean – not slimy. Fish should look and smell fresh from the sea. Flesh should be firm and spring back when touched.

Fillets: Select only firm fillets without discoloration that have a pleasant sea smell. Fillets must not be dull, soft or ooze water when touched.

POULTRY

Select only fresh meat or birds. Poultry should look and smell fresh.

VEGETABLES / FRUIT

Select firm, almost ripe fruit; check for bruises and blemishes – color should be clear and bright. Vegetables should be crisp and of good color. Try to avoid vegetables sold tightly packed in plastic wrap - they will spoil quickly. Never use vegetables that are soft or limp.

FOOD PREPARATION & PRESENTATION

PREPARATION

Careful preparation pays off in an appetizing, healthy and tasty meal(s). Always remove excess fat. Clean and trim vegetables and garnishes, removing all bruises and blemishes. Use only the freshest meats and vegetables.
Always ensure that all items of the meal are cooked at the right time. This usually requires different starting times that must be planned ahead.

PRESENTATION

Try a few of these interesting ways to perk up your table and make any meal a festive occasion:

- Slice a freshly baked loaf of bread or dinner rolls into a basket lined with colorful napkins. Serve with butter or margarine, softened and mixed with grated cheese, garlic salt or your favorite seasoning.
- Main course meats are more attractive when displayed on a large platter surrounded by fresh parsley sprigs, carrot curls (made with a potato peeler) and radish roses.
- Serve sauces in a pretty piece of china or glassware. Drop in a ladle and bring to the table on a plate for easier passing between guests.
- Flowers on the table are always effective, but in a pinch use a grouping of your favorite figurines or house plants.
- Candles make dinners cozy, so turn down the lights and turn up the charm. Float small, flat candles in a large, clear bowl filled with water. The effect is magical.

21. This appliance is for household use only; it is designed to process normal household quantities. It is not suitable for continuous or commercial operation.
22. Do not disassemble the product. There are no user serviceable parts.
23. Do not leave the appliance unattended while in use.
24. Use the handle when lifting the lid from the base.
25. Do not touch hot surfaces. Use the handles provided.
26. Turn the unit “off” before removing the lid to check or turn food. The lid and heater/control assembly should be placed on the lid holder.
27. Use caution when disposing of hot grease.
28. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
29. **FOR 120V Unit Only:** This appliance has a polarized plug (one blade is wide than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

I. INTRODUCTION

THE FLAVORWAVE OVEN® TURBO STORY THE NEXT GENERATION IN COOKING™

With the FLAVORWAVE OVEN® TURBO you can prepare delicious, healthful meals in less than half the time of traditional methods. What makes these superior results possible is our revolutionary approach to certain time-honored cooking methods.

Professional cooks have long known that they could improve upon traditional oven cooking by using a fan to accelerate the circulation of the oven's hot air. This traditional convection oven consists of a fan mounted on one side of a metal box.

The FLAVORWAVE OVEN® TURBO improves upon traditional convection ovens in the following ways:

- The FLAVORWAVE OVEN® TURBO bowl is made of glass, not metal, so that you can clearly see what you are cooking from all sides.
- The FLAVORWAVE OVEN® TURBO combines a circular bowl with a fan mounted in the lid so that hot air currents move down over the food, around the bowl's sides, and then back up to the fan. This creates a tornado-like flow of constantly moving, super-heated air that cooks and browns food quickly and thoroughly.
- The FLAVORWAVE OVEN® TURBO uses cooking racks that allow you to cook two levels of food at once. In addition, when meat, poultry, or fish is cooked on the lower rack, fats and oils are blown away through the grating. You will cook lighter, more nutritious meals.

 
II. USING YOUR FLAVORWAVE OVEN® TURBO

PRODUCT & ACCESSORY DIAGRAM

**FLAVORWAVE OVEN® TURBO
(AX-767MH)**



STANDARD ACCESSORIES

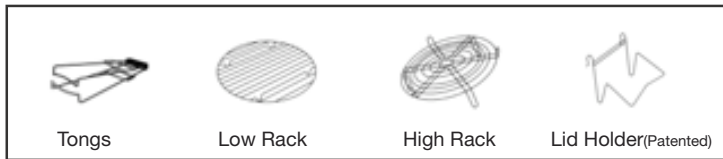

• **COOKING A COMPLETE MEAL AT ONCE**

By using two levels of racks, it is easy to cook an entire meal at once. Keep in mind that different foods and different weights of foods take different amounts of time to cook. Think ahead. Put the food that takes the longest amount of time to cook on the low rack.

Later on during the cooking process, put the other food on the high rack. Now your complete meal of meat, potatoes and vegetables are all cooked together and will be ready at the same time.

• **PLACING FOODS FOR OPTIMUM COOKING**

When placing several pieces of food on the wire rack, be sure to leave at least 1/2-inch between the food and the side of the glass bowl. This space allows the air to flow freely through the oven.

Also avoid stacking food on food in order to cook more at one time. The hot air must circulate freely in order to cook the food properly.

• **KEEPING FOOD CRISP**

After the food is cooked, turn the thermostat down, keeping the fan running. Your food will stay hot and crisp.

• **TO MAKE YOUR CLEAN-UP EVEN EASIER**

Before cooking, spray the oven, including the racks and pans, with a non-stick product first. Wiping away the grease and residue after cooking will be even easier.

• **ADAPTING RECIPES**

As a rule of thumb, when using recipes intended for conventional ovens, temperatures will remain the same but cooking times will be less.

The cooking times in the recipes in this book should be used as a guide. You need to judge whether your piece of meat weighs less or more than that which is used in the recipe and slightly adjust your cooking time. When working with the FLAVOR WAVE OVEN® TURBO for the first time, we suggest using a meat thermometer. Watch the cooking progress through the glass bowl. After a short time you will easily be able to adapt your favorite recipes for the FLAVOR WAVE OVEN® TURBO.

• **PREHEAT YOUR OVEN (when it is recommended by the recipe book)**

For optimum cooking, preheat your oven at 250°C/480°F for six (6) minutes prior to cooking.

• **COOKING TIME**

Cooking times shown in this manual will vary depending on the volume, weight and mass of the food or the desired crispness you want.

• **CORN SHOULD NOT BE SHUCKED PRIOR TO COOKING.**

III. HELPFUL HINTS

A HEALTHIER LIFESTYLE

With the FLAVORWAVE OVEN® TURBO, you are always cooking with hot air (dry roasting) and with the food suspended on a wire rack. As a result, retention of fat is minimized, leading to fewer calories, lower fat and cholesterol consumption and a healthier lifestyle.

You will find that, with the FLAVORWAVE OVEN® TURBO, it is not necessary to add fat, oil, butter or margarine to most recipes. However, you can do so if you wish.

We recommend the following steps to further improve your health:








1. Eat a variety of foods including items from all food groups daily.
2. Eat less butter, fat and sauces.
3. Eat less sugar and sweets.
4. Eat plenty of fruits and vegetables (preferably steamed).
5. Drink only moderate amounts of alcohol.
6. Drink plenty of water every day.
7. Use less processed foods-eat more fresh food instead.
8. Eat less at a time, but eat regularly.
9. Use fat, oil, butter and margarine sparingly.
10. Use salt sparingly.
11. Dry roast your food as often as possible.

COOKING TIPS

TO USE YOUR FLAVORWAVE OVEN® TURBO TO ITS FULLEST POTENTIAL, HERE ARE A FEW COOKING TIPS TO REMEMBER...

- **DEPENDING ON FOOD TYPE, WEIGHT, VOLUME AND TEXTURE, FOOD SHOULD BE FLIPPED DURING THE COOKING CYCLE.**
- **WHENEVER POSSIBLE PLACE FOOD DIRECTLY ON THE WIRE RACK**
Cooking on a wire rack allows the hot air to circulate freely around the food, cooking it quickly and evenly without turning.

OPTIONAL ACCESSORIES

	<p>Grilling Plate Coated with non-stick material, is designed for grilling. Position the grilling plate on the high rack and heat at max temperature for about 5 min then put pieces of cooked meat on it and you will sear the lines just like on your outdoor BBQ.</p>		<p>Steam Basket Can be used for steaming vegetables... for baking French fries without grease... for steaming fish wrapped with aluminum foil etc.</p>
	<p>Browning Tray Is a special accessory for your Flavorwave Turbo Oven. It serves the purpose of browning, or making food crisp by oxidizing.</p>		<p>Breakfast Tray Is ideal for preparing your favorite breakfast, just place pieces of toast bread, bacon and eggs on the rack and cook at the same time.</p>
	<p>Extender Ring The Flavorwave Turbo Extender Ring makes it possible to cook larger turkeys, chickens, hams etc. Insert the Extender Ring between the glass bowl and the lid and increase the height of the Flavorwave Turbo bowl by an additional 3" (9 cm)</p>		<p>Quick Skillet with non-stick coating Place the Quick Skillet onto the metal skillet holder, put the FlavorWave Oven Turbo lid with halogen heater on top and you are ready to prepare your quick skillet dishes. Please refer to the "How to operate the FlavorWave Oven Turbo Instructions" to set temperature and time.</p>
	<p>Roast Rack When roasting a whole turkey/chicken you may use the Roast Rack. Place the Roast Rack on the High Rack and then position a whole turkey/chicken. Note: Must be used with the Extender Ring.</p>		

Roasting Rack - How to Assemble

- The Roasting Rack is two separate pieces of metal (Fig. 1).
- At top, metal piece has a hole (left).
- At top, piece curves up (right).
- Take the right piece and thread an end through hole of left piece. The curved top section should be stationed in hole of left piece.
- To position the Roasting Rack onto the High Rack, attach the ends of the Assembled Roasting Rack to the designated curves on the High Rack (Fig. 2).

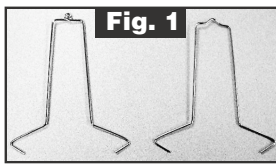 


Fig. 1


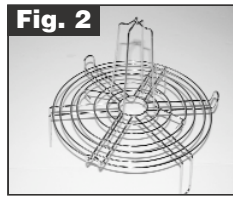 



Fig. 2

Chicken, roasting hens, etc... are placed over joined metal pieces (Roasting Rack).

 
PART ASSEMBLY DIAGRAM

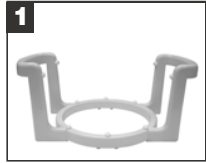

 1 Place the bowl holder on a firm surface.

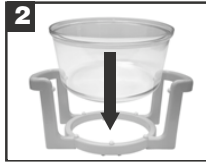

 2 Place the glass bowl inside the bowl holder.

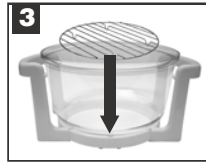

3 Place wire rack(s) inside the glass bowl.



4 Place the lid on the glass bowl.



5 Assembly is now complete.

BEFORE YOU BEGIN COOKING

PREPARING YOUR FLAVORWAVE OVEN® TURBO

! FOR THE FIRST TIME ONLY

The FLAVORWAVE OVEN® TURBO should be heated once before cooking with it. While preparing the oven according to the following instructions, the oven will give off a slight burning odor. The oven is actually burning off excess lubricants found in the oven's heating elements and will not harm you or the oven.

FOLLOW THESE EASY STEPS...

- Wipe the inside of the glass bowl with a damp sponge
- Secure lid on oven
- Set timer for 5 minutes
- Set thermostat to 250°/482°F and turn oven on
- After timer has shut oven off, allow to cool for 5 minutes
- Wipe inside of the glass bowl with a damp sponge a second time

NOW YOUR FLAVORWAVE TURBO OVEN IS READY TO COOK YOUR FIRST MEAL!

IMPORTANT:

DO NOT WASH OR IMMERSE THE LID IN WATER OR IN DISHWASHER. THE OUTER SURFACE CAN BE CLEANED BY WIPING CAREFULLY WITH A DAMP DISH-CLOTH OR SPONGE.



For Model AX767MH. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

6. Temperature Selection: Press the "Temp" button gently to move the temperature selector through the temperatures one at a time from left to right. A light will indicate the selected temperature. Once 260°C (500°F) is reached the cycle will start all over again at "wash" (Note: you may change the temperature setting during cooking by pressing the "Temp" button).
7. Select Fan Speed: Press the "Speed" button to change the fan speed. The indicator light will move from left to right. Once "High" is reached the cycle will start over again at "Low" (Note: you may change the fan speed during cooking by pressing the "Speed" button).
8. To begin cooking, press the "Start" button. The unit will not operate unless time, temperature and fan speed are set and safety handle (or lid) is down. (Note: Unplugging the oven will erase all settings).
9. When the timer reaches "00:00", the cooking cycle is finished and the appliances will beep 6 times. At the same time, the power light goes off but the temperature indicator light is still on. If the oven temperature is over 150°C (300°F), the fan speed indicator light will flash and the fan will continue to operate to allow the heating element to cool. When the oven temperature drops down to 150°C (300°F), the fan will stop operating and the fan speed indicator light will stop flashing.
10. Press the "Clear" button to reset all functions. The timer will be reset to "00:00", temperature indicator light shut off and timer will stop. The fan will stop operating while the oven temperature is below 150°C (300°F).
However, if the oven temperature is over 180°C (350°F), the fan speed will switch to low speed and start to dissipate heat. At the same time, the speed indicator light stays at the original position and flashes until the oven temperature is dropped down to 150°C (300°F).
11. When the oven temperature reaches the selected temperature during cooking. The temperature indicator light will flash. However, when the oven temperature drops below the selected temperature, the light will stay at "on" again without flashing.

How to use Expansion Device:

1. Press the safety button and hold at its release position as illustrated in 1, fig.6.
2. Press the push button upward and lift the lid to extended position as illustrated in 2, fig.6.



Do not press the safety button when moving or holding the appliance.


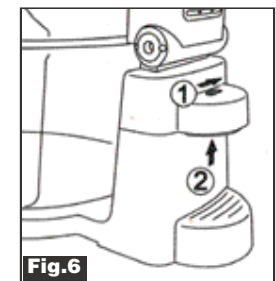 


Fig.6

 HOW TO OPERATE THE FLAVORWAVE OVEN® TURBO PLATINUM (AX-797DH)

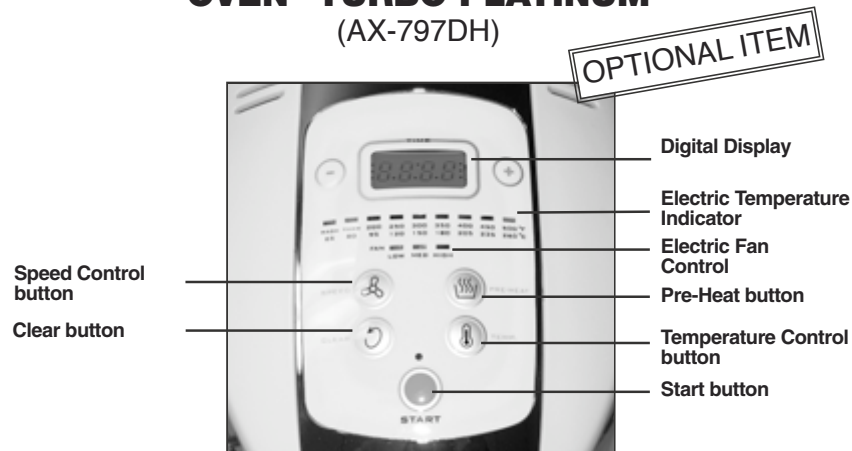

1. Plug one end of Power Cord into back of lid (AX-797DH) and the power plug in a standard AC outlet.
2. The digital timer will display "00:00", temperature indicator light will stay at 65°C (wash) and the fan speed indicator light at "High". If not, press "Clear" button to bring out the above status.
Note: Please allow time tolerance of 5-7 min for 60 min timer setting.
3. Place lower wire rack in the glass bowl of the oven. (Note: Use the lower rack for all recipes unless otherwise noted). Place food directly on rack unless otherwise specified.
4. **If the recipe required preheating, follow this procedure:**
Press the "Pre-Heat" button. this will cause the oven to operate at its highest temperature and fan speed for 6 minutes. Preheating is complete when the timer reaches "00:00" and the fan light flashes. Press the up arrow to increase the preheating time, if needed.
5. Time Selection: press the "+" or "-" buttons lightly to raise or lower the time selected in increments of 1 minute up to 23 hours and 59 minutes. Holding the "-" button will cause the increment more quickly. The "Clear" button will reset the timer to zero. (Note: you may change the cooking time during cooking by pressing the "+" or "-" buttons).


HOW TO OPERATE THE FLAVORWAVE OVEN® TURBO (AX-767MH)

1. Attach the Lid Holder as illustrated in fig. 1.
2. Place either the low or the high rack inside the glass bowl of the oven.
NOTE : Use the lower rack for all recipes unless otherwise noted.
3. Place food directly on rack, unless otherwise specified.
4. Secure lid on oven.
5. Plug the power cord in to an electrical outlet

NOTE: HANDLE MUST BE PUSHED TO THE HORIZONTAL POSITION TO TURN OVEN ON. WHEN HANDLE IS IN VERTICAL POSITION, OVEN IS OFF.


Thermostat

 6. Turn the thermostat knob clockwise to set thermostat to the desired temperature referring to "Quick reference Guide".
NOTE: During cooking time, when the oven reaches the preset temperature, it will shut off then it will start again automatically (this is normal).

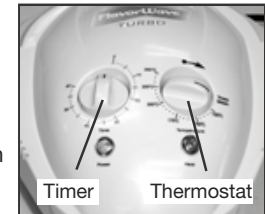


Timer: To Set Timer

 7. Turn the timer knob clockwise to 60 min and then turn back to the desired time.
Note: Please allow time tolerance of 5-7 min for 60 min timer setting.
8. Push safety handle down (until you hear a click sound) to "ON" position.
9. When the timer reaches the end of the cooking cycle it will stop and you will hear a bell sound.
10. Remove the lid. **CAUTION-ALWAYS PLACE THE LID ON THE LID HOLDER** and make sure that the handle is in OFF position, as illustrated in fig. 3.
11. Now you can remove your food from the oven.
Remember, the food is hot inside the oven, pay extra attention. Use the Tongs provided to remove the rack and food from the oven as illustrated in fig. 2.

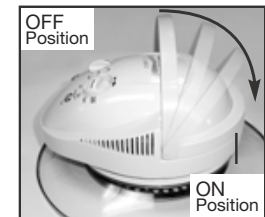

 ! All glass surfaces of the oven get very hot. Touching these surfaces before oven cools will cause a burn. Do not touch any glass part of the oven until it has cooled down.

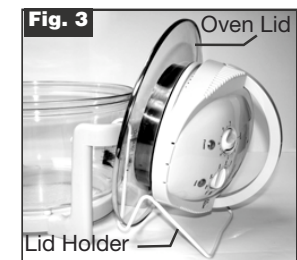

CLEANING YOUR OVEN

⚠ ALWAYS UNPLUG THE OVEN BEFORE CLEANING

LIGHT CLEANING

- Unplug oven and let cool.
- Use a sponge or dishcloth with a mild dish washing detergent and warm water to wipe glass bowl clean.
- Rinse well to remove all detergent.
- Note : Never immerse the lid in any liquid.

NORMAL CLEANING

- Unplug oven and let cool.
- Wipe lid and fan housing using a dishcloth or damp sponge with a mild dish washing detergent.
- Do not clean with steel wool pads or abrasive materials.
- Wash wire racks in mild dish washing detergent and water.
- Clean metal parts using a sponge or dishcloth with a mild dish washing detergent, then wipe clean. If scrubbing is necessary, use a nylon or polyester mesh pad.

! DO NOT USE THE OVEN UNTIL IT'S COMPLETELY DRY

SELF CLEANING OF GLASS BOWL

- Add tap water until the water reaches the mark level on the bowl holder in fig.4.
- Add one squeeze of mild dish washing detergent.
- Replace lid and plug in.
- Set heat control to "wash" and set timer for 10 minutes. (The hot air circulation creates the turbo action that helps release stubborn residue from bowl.)
- After cleaning rinse in warm water to remove all soap residue.



Fig.4

DISHWASHER-SAFE GLASS BOWL

The glass bowl and wire racks may also be washed in the dishwasher.

However, never wash the lid in a dishwasher or immerse it in liquid. Remove the glass bowl from its stand before dish washing.

REMEMBER...

- Unplug oven before cleaning the lid
- Let oven cool before washing
- Never immerse lid in water
- Do not add water above the line marked on the glass bowl when self cleaning
- Do not let fan assembly get wet



Fig.5

DRYING THE OVEN

- The oven must always be kept dry after cleaning to avoid moisture in the lid.
- Make sure the oven is unplugged, leave lid slightly open and allow the oven to dry thoroughly as illustrated in fig.5.

! TO AVOID BREAKAGE ALLOW THE GLASS BOWL TO COOL BEFORE POURING WATER OR SELF CLEANING

FLAVORWAVE OVEN® TURBO PLATINUM

PRODUCT & ACCESSORY DIAGRAM

FLAVORWAVE OVEN® TURBO PLATINUM (AX-797DH)

