 


Cordless **Swivel Sweeper**[™] G2

U.S. Patent No. 7,152,267
U.S. Patent No. 7,340,795
Other U.S. & Foreign Patents Pending.

Distributed by

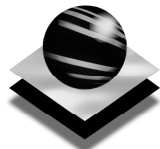

 
Thane Direct Canada, Toronto, Canada www.thane.ca
Thane Direct UK, Ltd. www.thanedirect.co.uk

Ontel[®]
PRODUCTS CORPORATION

Fairfield, NJ 07004

Made In China

© 2008 Ontel Products Corporation. All Rights Reserved.

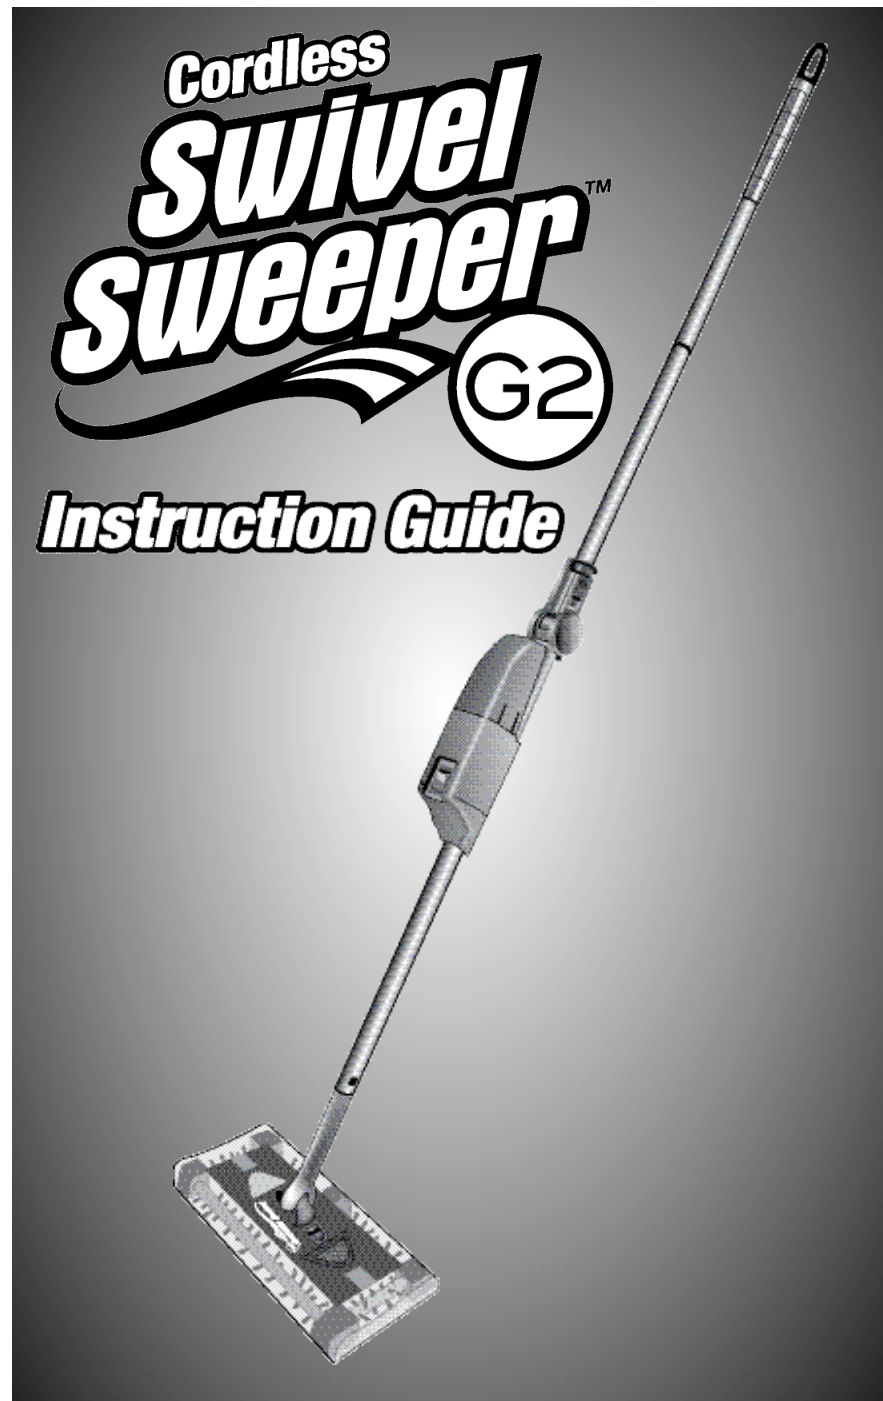



Congratulations and thank you for purchasing the Cordless *Swivel Sweeper*[™] G2, the quick & agile floor and carpet sweeper that lets you clean dirt and messes faster and easier than ordinary cordless sweepers. **The Secret:** *Swivel Sweeper*[™] G2 combines the cleaning power of Quad-Brush® Technology – powerful rotating cleaning brushes pick up dirt and messes from all four sides of the sweeper head – with a 360° swivel feature to easily maneuver around furniture and other objects. It has an extended pole, is super-lightweight and it's bagless too! *Swivel Sweeper*[™] G2 glides effortlessly on four gentle floor super sliders while its back-saver elbow joint and low-profile design lets you get under couches, beds and other furniture with ease. Now with Touchless Dirt Tray – just push tabs to empty for quick disposal of dirt & debris.

BASIC TROUBLESHOOTING:

1. Swivel Sweeper G2 is sluggish or won't start:

Make sure the battery is fully charged and securely inserted into the "Battery Compartment" and that the pole section with the "Battery Compartment" is securely connected to the "Pole Base." Check the "Rotating Cleaning Brushes" to make sure they are not entangled with hair, debris, etc.

2. Battery not charging:

Make sure that the "Rechargeable Battery" is fully inserted into the "Battery Charger." Also, check to make sure that the red indicator light on the "Battery Charger" comes on when charging.

3. Rotating Brushes become bound and sweeper shuts off:

See "Automatic Shut-Off Feature" instructions on pg. 6.

4. Swivel Sweeper G2 operating but not picking up mess:

The "Touchless Dirt Tray" may be full. Empty out if necessary (see Emptying The Touchless Dirt Tray Instructions on pg. 7). Also, some debris may be lodged in carpeting (such as staples) or may be too large/heavy for the sweeper to pick up. Make sure the "Touchless Dirt Tray" is fully closed.

5. Dirt & Debris escaping from sweeper during cleaning:

Make sure the "Touchless Dirt Tray" is empty and securely connected to the sweeper. Also, check to see that the "Rotating Cleaning Brushes" are not entangled with debris such as hair, paper, etc. Use the "Brush Cleaning Tool" to clean off, if necessary.

SAFETY PRECAUTIONS

 
MAKE SURE TO COMPLETELY READ AND UNDERSTAND ALL OF THE FOLLOWING SAFETY INSTRUCTIONS AND WARNINGS IN THIS BOOKLET & ON THE BATTERY CHARGER, PRIOR TO USING SWIVEL SWEEPER G2.

- Make sure Swivel Sweeper G2 is securely assembled before use.
- Never use Swivel Sweeper G2 clean up liquids or wet messes, especially not flammable or combustible liquids.
- Swivel Sweeper G2 contains a rechargeable 7.2V Ni-MH (Nickel-Metal Hydride) battery, dispose of battery properly.
- Keep fingers, hair, all other body parts and clothing away from the rotating cleaning brushes.
- Do NOT use Swivel Sweeper G2 to clean up any burning or lighted materials such as cigarettes, matches and ashes.
- Do NOT use on coarse concrete surfaces.
- Do NOT use outdoors: patios, decks or rough surfaces.
- Swivel Sweeper G2's mechanical parts are not user-serviceable. Contact a qualified professional for service.
- Make sure Swivel Sweeper G2 is turned off and that the battery is removed, before cleaning its rotating brushes of hair, debris etc.
- Do NOT handle or charge battery when hands are wet.
- Only use the included charger to charge Swivel Sweeper G2's battery.
- Store your Swivel Sweeper G2 indoors in a dry, safe place.




COMPONENTS

1. Handle with Rotating Rubberized Hang Loop
2. Handle
3. Heavy Duty Aluminum Pole
4. Rechargeable 7.2V Battery
5. Back Saver Elbow Joint
6. Elbow Joint Lock Release Switch
7. Battery Compartment
8. On/Off Switch
9. Magnetic Latch A
10. Pole Base
11. Air Filter
12. Tinted Outer Body Frame
13. Base
14. Touchless Dirt Tray
15. Outer Body Frame Lock Clips
16. Rotating Cleaning Brushes
17. Magnetic Latch B
18. Touchless Dirt Tray Lock Clips
19. One-Piece Battery Charger
20. Brush Cleaning Tool & On-Board Storage Cover

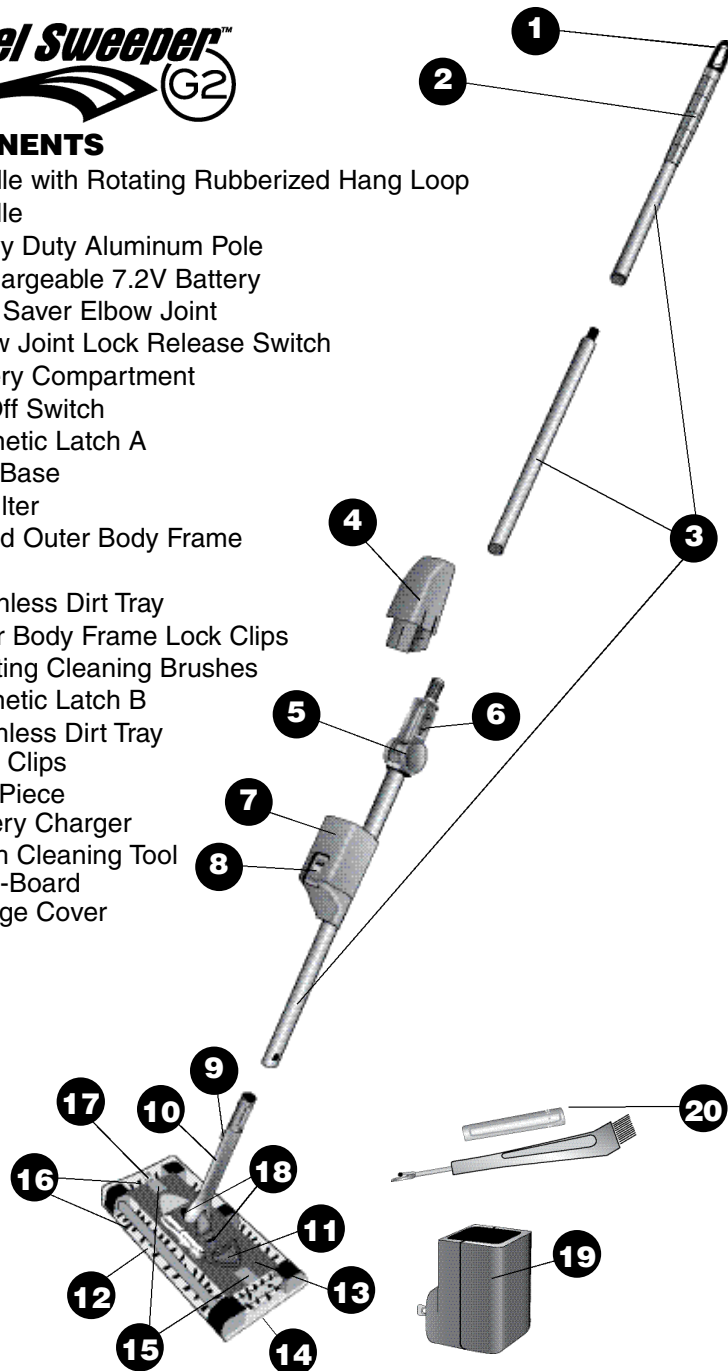


IMPORTANT MAINTENANCE & CARE: (continued)

 Step 5) Replace the "Tinted Outer Body Frame" and lock by sliding the "Outer Body Frame Lock Clips" outward and away from the pole (**SEE FIG. 12**).

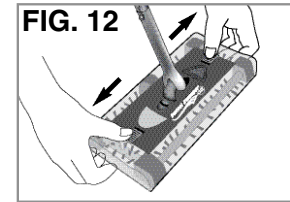

 Step 6) Lift the "Air Filter" up & out by its "Removal Notch" (**SEE FIG. 13**). Rinse the "Air Filter" off, let dry and replace back into sweeper.

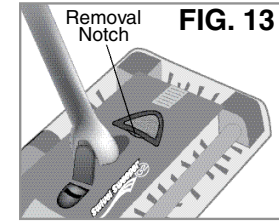

Periodically wipe down your Swivel Sweeper with a dry or damp lint-free cloth. Do not use water, liquid cleansers or abrasive materials to clean Swivel Sweeper.

MAGNETIC LATCH SYSTEM FOR SPACE-SAVING STORAGE:

Swivel Sweeper's Magnetic Latch System lets you store your sweeper in a compact manner between uses.

Storing Swivel Sweeper Between Uses:

IMPORTANT: When you are finished cleaning with Swivel Sweeper, empty out the "Touchless Dirt Tray," close it, then fold the sweeper head up to the side of the "Pole Base" to engage the two "Magnetic Latches," for space-saving storage between uses (**SEE FIG. 14**).

To release the sweeper head from the "Pole Base," gently tap it down.

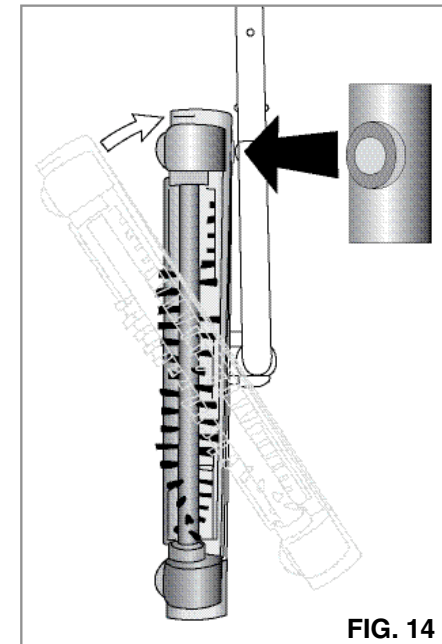 


FIG. 14

IMPORTANT MAINTENANCE & CARE:

As with any rotating brush cleaning device, Swivel Sweeper's four cleaning brushes will accumulate fine debris such as hair, thread and other particles. To maintain optimal sweeper performance, clean the sweeper's rotating brushes of hair and debris and its "Air Filter" of dust and dirt as necessary following the directions below.

Step 1) Make sure the Swivel Sweeper is turned OFF and remove the battery to ensure unit does not accidentally turn on.

 
 
 
 
Step 2) Unlock the "Tinted Outer Body Frame" by sliding the two "Outer Body Frame Lock Clips" inward towards the pole (SEE FIG. 8).

Step 3) Next, lift the "Tinted Outer Body Frame" up and over the aluminum pole to remove it. The four rotating brushes are now completely exposed (SEE FIG. 9).


CAUTION: Brush Cleaning Tool has sharp tip and ripping blade. Avoid contact with tip and ripping blade.

Step 4) Use the comb side of the "Brush Cleaning Tool" to pull up and loosen tangled debris. Simply guide the blade along the shaft of the "Rotating Cleaning Brushes" (SEE FIG. 10).


Step 5) Use the other end of the "Brush Cleaning Tool" to cut and remove tangled debris. Simply guide the blade along the shaft of the "Rotating Cleaning Brushes" (SEE FIG. 11). Dispose of debris in garbage.

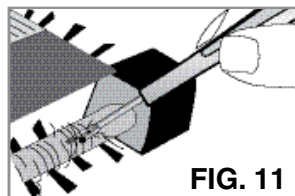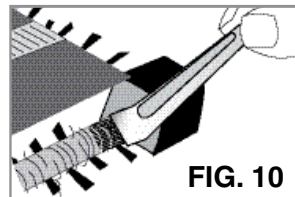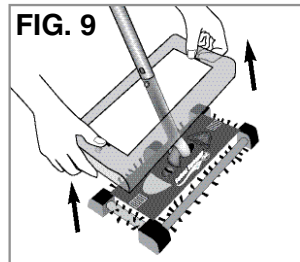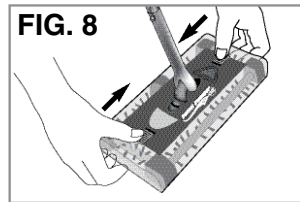


TO ASSEMBLE SWIVEL SWEEPER:

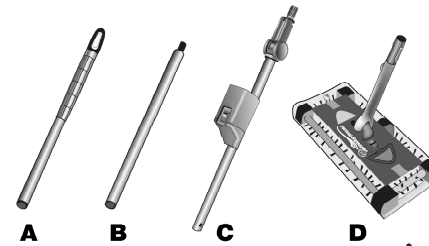 

 
- A. Upper Pole
- B. Middle Pole
- C. Lower Pole
- D. Sweeper Head

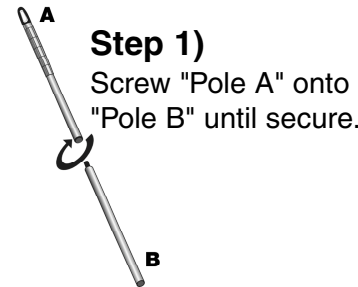

 Step 1)
Screw "Pole A" onto "Pole B" until secure.

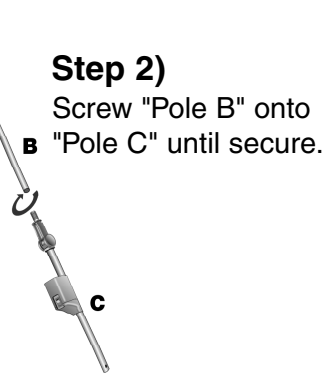

 
Step 2)
Screw "Pole B" onto "Pole C" until secure.

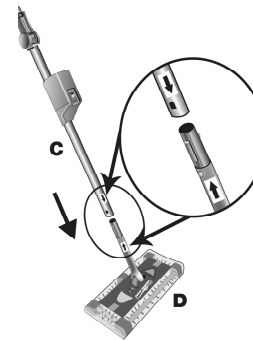

Step 3)

Align the arrow on "Pole C" with the arrow on "Sweeper Head D." When arrows are aligned, pole will easily slide onto Sweeper Head. Then push firmly together until pole locks into place.

 CHARGING YOUR BATTERY:

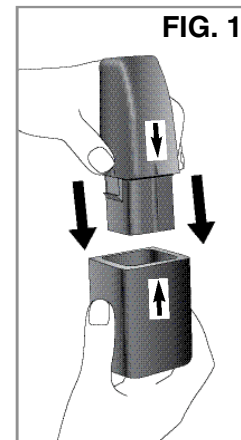

Step 1) Plug the "Battery Charger" into a standard electrical outlet as below:
UL/cUL 120V AC 60Hz
TUV/UK 220-240V AC 50/60Hz

Step 2) Align the arrow on the "Rechargeable Battery" with the arrow on the "Battery Charger." Then, insert the "Rechargeable Battery" down into the "Battery Charger" (SEE FIG. 1). **NOTE:** Red light on the front of the "Battery Charger" should turn on to indicate that the battery is charging.

 
IMPORTANT: For initial battery charge, let battery charge for at least 8 full hours. When recharging, charge time will vary dependent upon the amount of power that is left in the battery after its last use. Recommended recharging time for the battery after completely depleting it is 6-8 hours. Battery may be left in charger for extended periods of time but do NOT exceed 24 consecutive hours. Doing so may lead to shortened overall battery life. It is not necessary to wait until battery power is fully depleted before recharging.

USING SWIVEL SWEEPER:

Step 1) Make sure the Swivel Sweeper is turned off. (NOTE: The "On/Off Switch" is located on the front of the "Battery Compartment").

Step 2) Make sure the "Touchless Dirt Tray" is empty (see following directions on EMPTYING THE TOUCHLESS DIRT TRAY).

Step 3) Insert the "Rechargeable Battery" down into the "Battery Compartment" located on the front of the pole until it locks into place (SEE FIG. 2).

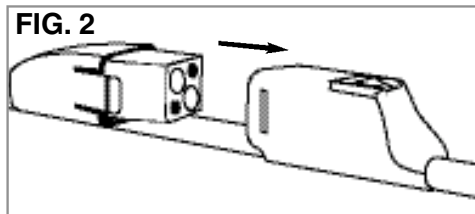

Step 4) Turn the Swivel Sweeper G2 on to begin cleaning.

Step 5) When you are done cleaning, turn the Swivel Sweeper off and empty the contents of the "Touchless Dirt Tray" into a garbage receptacle. (See the following instructions to empty the "Touchless Dirt Tray.") Recharge the battery if necessary.

IMPORTANT: AUTOMATIC SHUT-OFF FEATURE

Swivel Sweeper will automatically shut off to protect its moving parts if the brushes become bound by carpets, rugs, hair or other objects.

TO RESET THE SHUT-OFF FEATURE:

1. Place the "On/Off" switch in the "Off" position.
2. Untangle the sweeper's brushes from the object(s) they are bound by.

 
Sweeper will be ready to operate within 10 minutes.

USING THE BACK SAVER ELBOW JOINT FEATURE:

Step 1) To sweep under furniture, push the "Elbow Joint Lock Switch" up towards you to unlock (SEE FIG. 3).

Step 2) Then push the sweeper pole down so the "Elbow Joint" bends towards the floor (SEE FIG. 4).

Step 3) To lock the "Elbow Joint" into the starting position, pull the sweeper pole back up until the "Elbow Joint" locks into place (SEE FIG. 5).

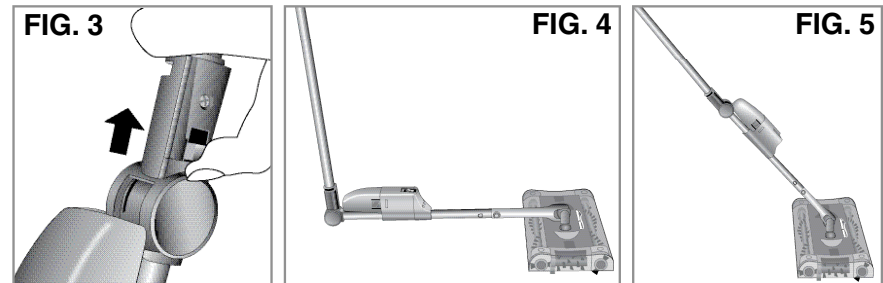

EMPTYING THE TOUCHLESS DIRT TRAY:

Step 1) Make sure the Swivel Sweeper is turned off.

Step 2) With the Swivel Sweeper "Base" over a garbage receptacle, press and hold the "Touchless Dirt Tray Lock Clips" inward (SEE FIG 6) until the "Touchless Dirt Tray" swings open (SEE FIG. 7).

Step 3) Empty the dirt and debris into a garbage receptacle.

Step 4) Then place the "Base" back on the floor or other flat surface. With gentle downward pressure, snap the "Touchless Dirt Tray" closed.

IMPORTANT: If "Touchless Dirt Tray" does not securely connect back up into the "Base," check to make sure that no small metal debris (e.g. staples, paper clips etc.) has magnetized to the Swivel Sweeper's motor located on the underside of the "Base."

